

BRUPAKS ELECTRIC BOILER

This appliance conforms with the EEC Directive 89/336/EEC for radio interference level and electromagnetic compatibility (EMC) as well as the low voltage Directive 73/23EEC.

IMPORTANT INSTRUCTIONS

Thank you for choosing Brupaks Electric Boiler. This electronic appliance corresponds with the accepted rules of technology and the safety laws. To make sure you get the best out of your new Brupaks boiler please observe the following notes carefully:

- Read the operating instructions carefully before using the appliance and keep them for further reference.
- The appliance may not be used when:
 1. The power cord is damaged
 2. There is visible damage to the appliance
 3. If the appliance has been dropped
- Only connect the appliance to an AC power outlet.
- Unwind the power cord completely.
- Place the appliance on a level, stable and unobstructed surface.
- Never place the appliance or the power cord on a hot surface or near a open gas flame.
- Fill with water before use.
- Do not overfill. Leave at least 4cm space below rim.
- Do not leave the power cord dangling.
- The plug should be removed:
 1. If damage occurs during use,
 2. Before cleaning,
 3. After each use.
- Never immerse the appliance in water and protect the power cord from damp.
- Never let children handle the appliance unsupervised. Exercise extreme caution when in the presence of children.
- This appliance is designed for household use only and is not intended for commercial purposes.
- If used incorrectly or for purposes other than those for which it is designed, no legal responsibility will be assumed for possible damages.

Capacity: 29 litres. The level of liquid should not be higher than 4cm below the rim.

Instructions for Use

- Thoroughly cleanse the inside of the appliance before the first use.
- Fill with water before turning on the appliance.
- Do not overfill the water container. Leave at least 4cm below the rim. If overfilled boiling water can spill over.
- **Caution:** Danger of scalding from escaping steam.
- The appliance will become hot when in use. If it must be moved use the insulated handles.
- Only carry the appliance when it is cool.

Notes

This appliance is not suitable for heating or cooking thick liquids. The heating element is exposed and uncovered. Burning could therefore occur.

Temperature Control

- The appliance is equipped with a precision thermostat. The temperature control (4) is infinitely variable from approx 30C up to boiling.
- The desired temperature setting is not reached until the indicator lamp (5) goes out for the first time and the actual boiling time doesn't start from that moment.
- When the process has been completed, turn the temperature control (4) all the way to the left, anti-clockwise and remove the plug.

Finding the correct setting for continuous boiling

1. Turn the temperature control (4) all the way to the right (clockwise) to 'Boiling'.
2. Wait for the water to boil.
3. Turn the temperature control (4) slowly towards the left (anti-clockwise) until the thermostat switches off. This can be recognised by a lower boiling noise and a calming down of the steam. In this thermostat setting the heating element will switch on and off automatically.

Cleaning

Never immerse the appliance in water. While the plug is removed the boiler can be wiped off on the outside with a damp cloth, the inside can be washed out.

Hard water deposits can be removed by a brief boiling with vinegar in water. Boil out with clear water.

GUARANTEE

For the warranty, which begins from the date of sale, the following conditions shall apply in the UK.

1. Warranty period: Two years.
2. Conditions of warranty:
 - a) Parts, which exhibit defects in material and/or workmanship after our inspection, will either be repaired or replaced according to our decision.
 - b) Warranty is only provided on presentation of this warranty and purchase receipt. This warranty is only valid if it is completed on the date of sale in a complete and appropriate manner.
 - c) This warranty is only valid for the first owner of the appliance.
 - d) No change or repair of parts performed within the warranty period shall provide grounds for any extension of the original warranty period.
 - e) Any transportation costs shall be borne by the purchaser (this shall not apply during the first six (6) months of the warranty).
 - f) If the damage or defect cannot be eliminated or if we fail to repair the defect satisfactorily then within the first six (6) months after purchase/delivery of the appliance the device will be replaced free of charge.
3. The warranty shall not apply to:
 - Spots and scratches.
 - Control lamps and light
 - Motor brushes
 - Easily breakable part (e.g. Bakelite, plastic, glass) even in case of defects in material recognised by us.
 - Damage due to improper installation or improper fixing.
 - Damage caused by an unsuitable voltage supply or an unsuitable electricity network.
 - Improper or inappropriate use of the appliance.
 - Unsatisfactory care
 - Damage caused by incompetent or insufficient maintenance
 - Damage caused by dropping the appliance or part thereof.
 - Improper transportation or inappropriate packaging during the transportation.

4. The warranty shall be deemed void:

- In case of use or application of the appliance other than its intended use for household purposes.
- In case of any servicing or repairing of the appliance performed by third parties that have not been authorised for such purposes by our company.

A one year warranty is provided for damage caused by defects in material or workmanship. The warranty period shall begin on the hand-over day and warranty is only granted on presentation of the warranty and the purchase receipt. No further claims shall be granted.

Model:

BRUEB001

Important: Please write down the FD-code located on the rating plate.

Name & Signature of Retailer

Date of Sale