




The **DOUBLE BLAST** Bottle Washer


- * ENGINEERED TO EFFECTIVELY RINSE TWO BOTTLES AT ONCE, WHILE USING ONE-THIRD THE AMOUNT OF WATER USED BY CONVENTIONAL WASHERS.
- * QUICK-CONNECT FEATURE FREES THE FAUCET UP FOR OTHER USES.
- * ELIMINATES STRESS ON FAUCETS AND 'WATER-HAMMER' DAMAGE TO PIPES.

Initial Assembly

- 
1. Thread brass half of the Quick-Connect onto laundry faucet. Kitchen faucets require The Double Blast Kitchen Faucet Adapter. *The flat side of the plastic connector must face the front of the sink.*
 2. Join the two halves of the Quick-Connect by pushing up and turning 1/4 turn.
 3. Cut the hose at the washer end to measure length "A" plus 1". Connect the hose to the washer body. *The washer should sit flat in the sink with the nozzles in a vertical position.* Shortening the hose slightly may be necessary. Twist the hose/washer connection so that the two prongs on the Quick-Connect are parallel with the two nozzles. Install hose clamp. **DO NOT OVER TIGHTEN.**
 4. To disconnect washer, always turn off faucet before twisting 1/4 turn. Brass half of Quick-Connect can be left on faucet.

TIPS

- Use small nozzles for rinsing bottles.
- To use large carboy nozzle, simply slide off small nozzle and replace with large nozzle.
- A standard siphon hose can be pressed on the tip of the large nozzle for rinsing racking tubes / filters etc.
- Cold or warm water is best, maximum water temperature 125°F

 **Fermtech** Ltd.

MADE IN CANADA

Visit us at www.fermtech.ca