



The Thief . . .


A Sampler With a Difference



1. Submerge empty **Thief** and remove.



2. Insert Hydrometer. Hold **Thief** by the top to keep vertical. Give it a twist to dislodge bubbles and prevent hydrometer from clinging to the sides.

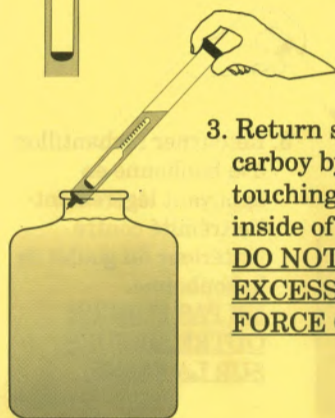

3. Return sample to carboy by gently touching tip to inside of carboy. **DO NOT APPLY EXCESSIVE FORCE ON PIN.**

IMPORTANT: Always sanitize/ rinse before and after use.

If valve tip drips, give the pin in the valve a few very firm tugs to reseat the pin.

 **Fermtech** Ltd.

Kitchener, Ontario

MADE IN CANADA

Visit us at www.fermtech.ca